

600 Series Parts List

No.	Qty.	Description	Part No.
1	1	Oil Reservoir Cover	UV-604-285-001
2	1	Oil Reservoir Cover Gasket	UV-424-338-002
3	1	Seal Housing (Horizontal)	UV-424-316-012
3	1	Seal Housing (Vertical)	UV-424-316-011
4	1	Stepped Key	UV-431-240-001
5	1	Shaft Sleeve	UV-430-726-002
6	1	External Retaining Ring	UV-085-027-094
7	1	Oil Slinger	UV-424-336-002
8	3	Shaft Clamp Plate	UV-424-326-001
9	4	Ball Bearing	UV-085-39-745
10	4	Wave Washer	UV-085-37-788
11	4	Rotating Labrynth Seal	UV-425-034-002
12	4	Stationary Labrynth Seal	UV-425-033-001
13	1	Bearing Housing (Horizontal)	UV-424-313-003
13	1	Bearing Housing (Vertical)	UV-424-665-012
14	1	Blower Housing	UV-432-299-002
15	1	"O" Ring (6 1/2 ID)	UV-085-042-116
16	1	Bypass Valve	UV-602-181-003
17	1	Compression Spring	UV-430-288-011
18	1	Metal Spacer	UV-603-369-001-M
19	1	Nylon Spacer	UV-603-369-001-N
20	1	"O" Ring (8 ID)	UV-085-036-358
21	1	Bypass Piston Sleeve	UV-430-726-002
22	1	Bypass Cap	UV-602-182-002
23	1	Drive Lobe	UV-424-311-008



600 Series Parts List

No.	Qty.	Description	Part No.
23	1	Driven Lobe	UV-424-312-002
24	1	Bearing Housing (Horizontal)	UV-424-313-003
24	1	Bearing Housing (Vertical)	UV-424-665-012
25	4	Stationary Labrynth Seal	UV-425-033-001
26	4	Rotating Labrynth Seal	UV-425-034-002
27	4	Ball Bearing	UV-085-39-745
28	2	Bearing Retainer	UV-424-327-002
29	2	Gear Spacer	UV-424-329-002
30	2	Gear Key	UV-424-651-006
31	2	Gears	UV-085-038-256
32	3	Shaft Clamp Plate	UV-424-326-001
33	1	Gear Housing (Horizontal)	UV-424-310-008
33	1	Gear Housing (Vertical)	UV-424-310-007

Items Not Pictured

No.	Qty.	Description	Part No.
34	1	Shaft Sleeve "O" Ring	
35	4	Bearing Housing Dowel Pins	
36	2	Gear Housing Pins	
37	1	Shaft Seals	UV-085-043-469
38	2	Seal Installation Tool	UV-600-505-001
40		Seal Insertion Tool	UV-426-365-002